

HULA 11

INFLATABLE SUP




Paddle Adjustment Instructions

1. Use your thumbs to push the locking pin outward.
2. Adjust the paddle shaft to desired length.
3. Push locking pin back into place.

NOTE: You may notice foam inside of the paddle shaft. It is ok to push the locking pin into this foam.

Advanced Elements INC.
Toll Free: 866-262-9076
Email: info@advancedelements.com

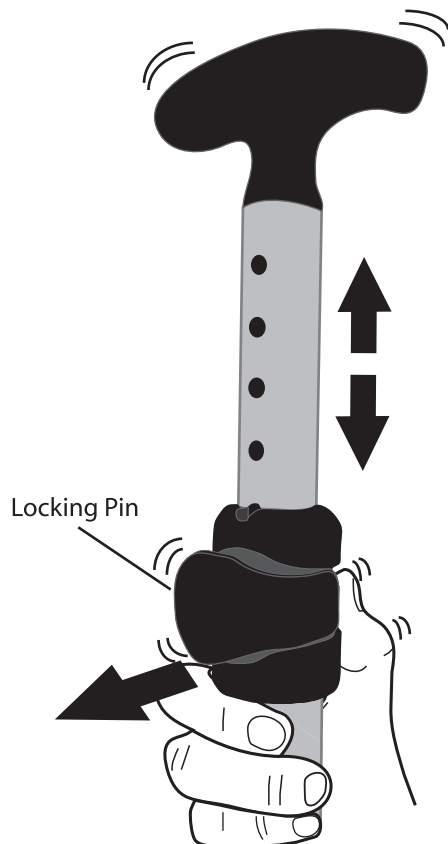

HULA 11

INFLATABLE SUP



Paddle Adjustment Instructions

1. Use your thumbs to push the locking pin outward.
2. Adjust the paddle shaft to desired length.
3. Push locking pin back into place.

NOTE: You may notice foam inside of the paddle shaft. It is ok to push the locking pin into this foam.

Advanced Elements INC.
Toll Free: 866-262-9076
Email: info@advancedelements.com